


TABLE OF CONTENTS

2001 Z 120

(Model No. S2001ZAAAAUSG)

SKI AND SPINDLE ASSEMBLY	1
A-ARM ASSEMBLY	2
FRONT SUSPENSION SHOCK ABSORBER	3
STEERING POST AND TIE ROD ASSEMBLY	4
DRIVE TRAIN SHAFT AND BRAKE ASSEMBLIES	5
SLIDE RAIL, IDLER WHEELS, AND TRACK ASSEMBLY	6
REAR SUSPENSION ARM ASSEMBLY	7
CHASSIS, FOOTREST, AND REAR BUMPER ASSEMBLY	8
HOOD, HEADLIGHT, AND WINDSHIELD ASSEMBLY	9
BELLY PAN AND EXHAUST ASSEMBLIES	10
GAS TANK, SEAT, AND TAILLIGHT ASSEMBLY	11
ENGINE AND RELATED PARTS	12
AIR CLEANER ASSEMBLY	13
CARBURETOR	14
CYLINDER AND CRANKCASE	15
PISTON AND CRANKSHAFT	16
RECOIL STARTER	17
THROTTLE CONTROL ASSEMBLY	18
MAGNETO	19
RELATED ITEMS	Back Cover


■ **NOTE:** The illustrations used in this Parts Manual are for reference to replacement part numbers only and are not to be used for assembly. For assembly procedures, use an Arctic Cat Service Manual. Underlined part numbers are new for the 2001 model year.

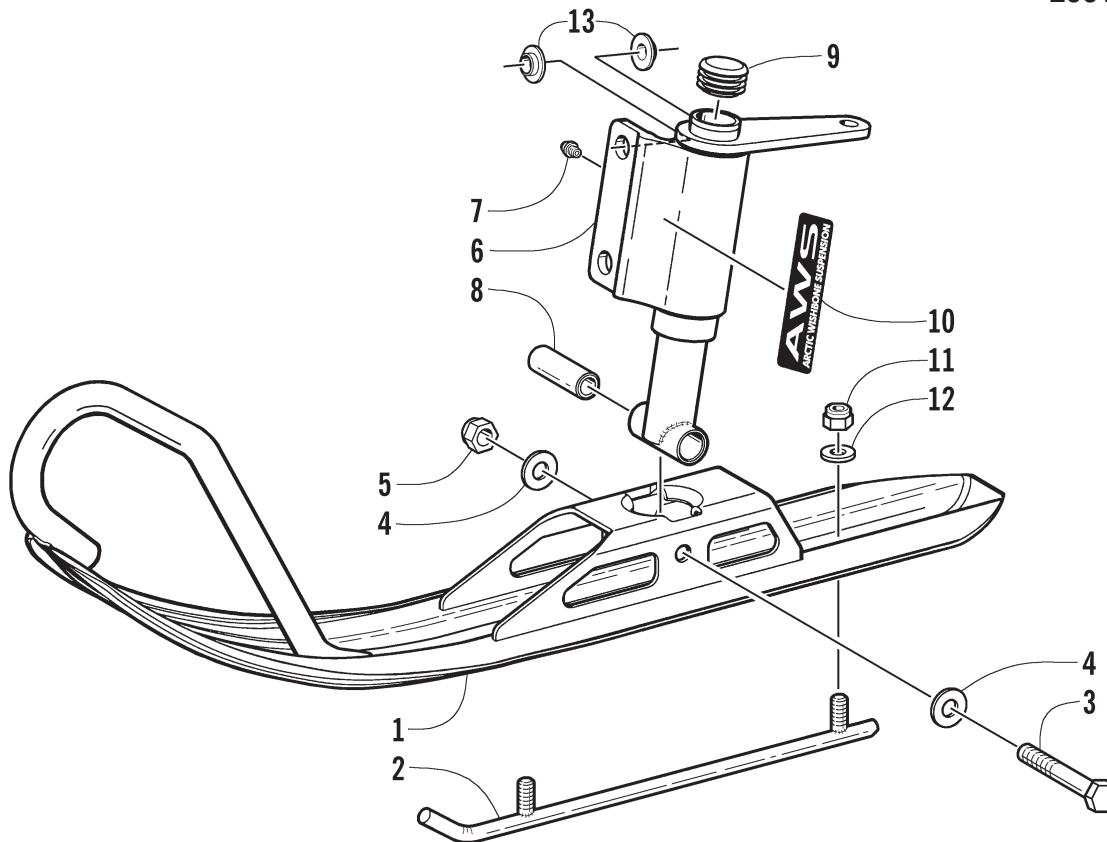

SKI AND SPINDLE ASSEMBLY

0736-145


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0703-692	2	Ski	8	1603-365	2	Axle, Suspension
2	0703-698	2	Wearbar	9	0623-831	2	Cap, Spindle
3	8002-230	2	Screw, Cap	10	3611-882	2	Decal, "AWS" - Spindle
4	8050-277	4	Washer	11	8040-426	4	Nut, Lock
5	8040-486	2	Nut, Lock	12	8050-247	4	Washer
6	0703-834	2	Spindle (inc. 7 and 13)	13	0603-647	8	Insert, Spindle
7	0623-010	2	• Fitting, Grease				

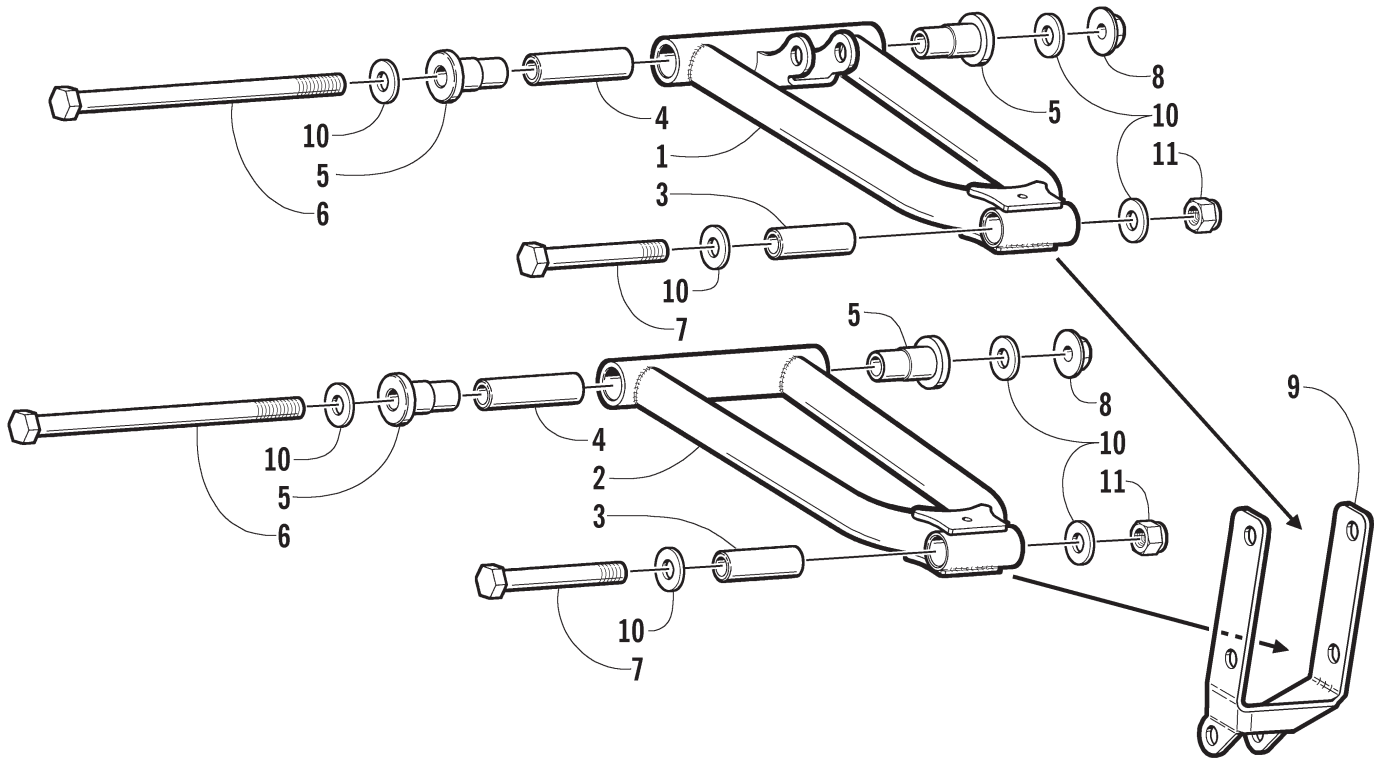

A-ARM ASSEMBLY

0736-146


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>0703-806</u>	2	A-Arm - Upper	7	8002-232	4	Screw, Cap
2	<u>0703-691</u>	2	A-Arm - Lower	8	0623-661	4	Nut, Crown Lock
3	<u>1603-365</u>	4	Axle, Suspension	9	<u>1603-463</u>	2	Bracket, Mounting - Shock
4	<u>1603-394</u>	4	Axle, Suspension	10	8050-277	16	Washer
5	<u>0605-451</u>	8	Axle, Powder Metal	11	8040-486	4	Nut, Lock
6	<u>0623-900</u>	4	Screw, Cap				

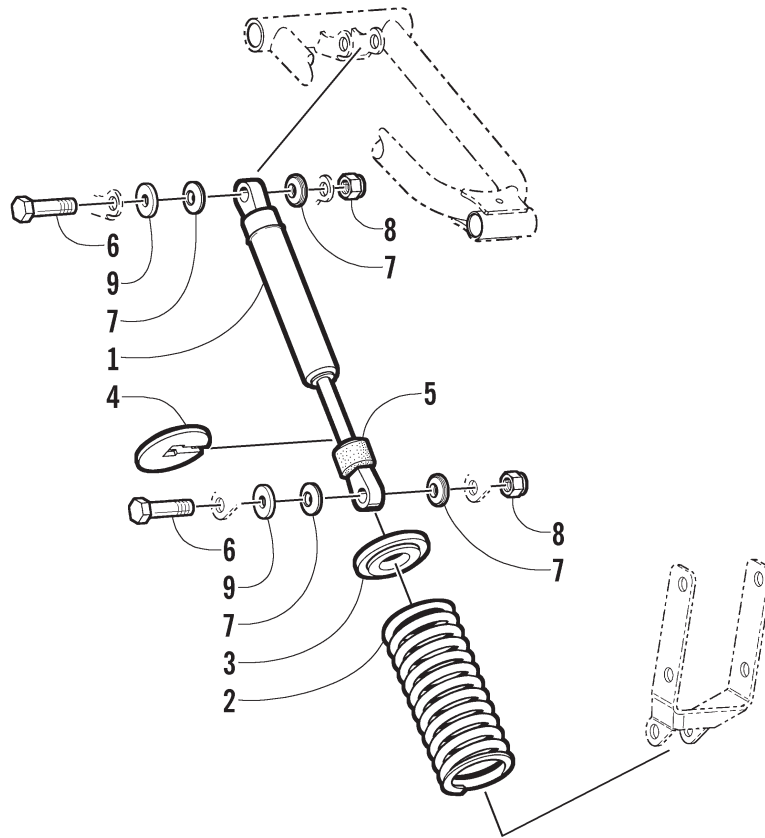

FRONT SUSPENSION SHOCK ABSORBER

0736-147


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>1603-458</u>	2	Shock, Ski	5	<u>1603-872</u>	2	Bumper, Rubber
2	<u>0703-802</u>	2	Spring, Shock	6	<u>0623-897</u>	4	Screw, Cap
3	<u>1603-862</u>	2	Retainer, Spring - Lower	7	<u>1603-863</u>	8	Bushing, Shock
4	<u>1603-861</u>	2	Retainer, Spring - Upper	8	8040-486	4	Nut, Lock
				9	0623-450	4	Washer

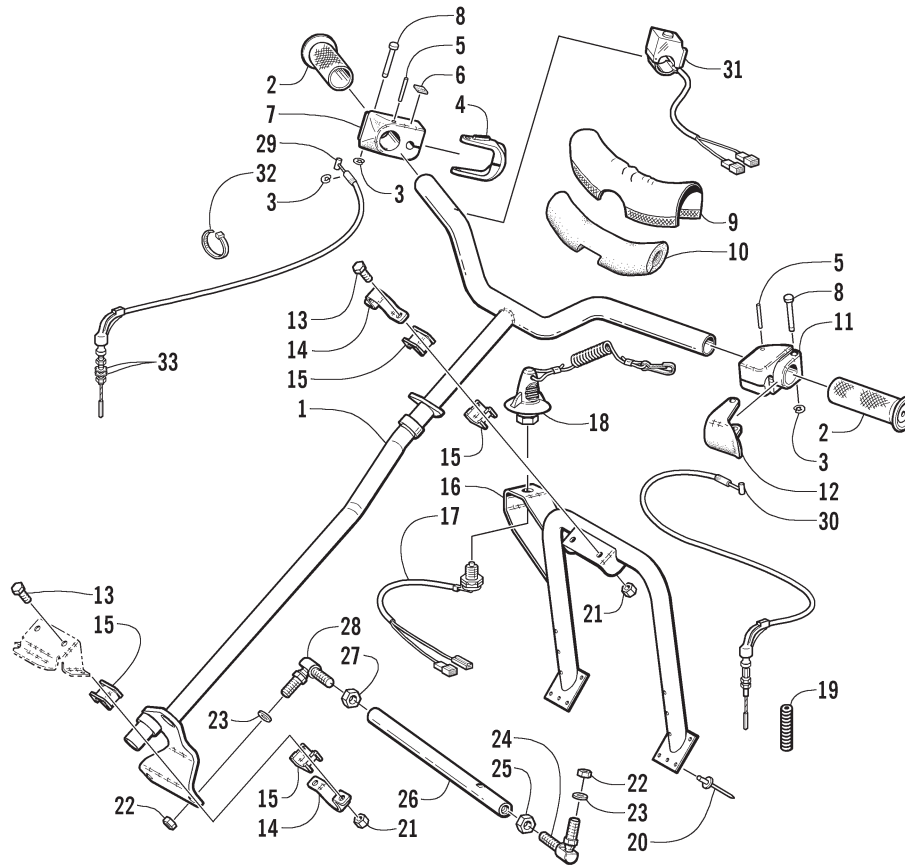

STEERING POST AND TIE ROD ASSEMBLY

0736-170


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0703-693	1	Post, Steering	18	0630-139	1	● Cord, Tether Switch
2	1606-765	2	Grip, Handle	19	1602-100	1	Spring, Return - Brake
3	0123-231	3	Ring, Retaining	20	8060-484	10	Rivet
4	0109-609	1	Lever, Throttle	21	8040-366	4	Nut, Lock
5	8070-318	2	Pin, Spring	22	0623-696	4	Nut, Lock
6	0611-022	1	Decal, Engine Stop Switch	23	0623-044	4	Washer
7	0302-165	1	Control, Throttle	24	1603-374	2	Rod End - Right
8	0123-230	2	Pin	25	0123-191	2	Nut, Hex - Right
9	0605-502	1	Cover, Handlebar Pad	26	0605-452	2	Tube, Tie Rod
10	0605-501	1	Pad, Handlebar	27	0123-917	2	Nut, Hex - Left
11	0302-147	1	Housing, Brake	28	1603-375	2	Rod End - Left
12	0302-085	1	Lever, Brake	29	0687-121	1	Cable, Throttle
13	8002-040	4	Screw, Cap	30	0687-122	1	Cable, Brake
14	0605-446	2	Retainer, Bearing	31	0609-007	1	Switch, Engine Stop
15	0605-444	4	Bearing, Steering Post	32	0123-788	AR	Cable Tie - 7 in.
16	1706-050	1	Support, Steering Post	33	8053-212	2	Washer, Lock - External Tooth
17	0630-138	1	Switch, Tether - Assembly (inc. 18)				

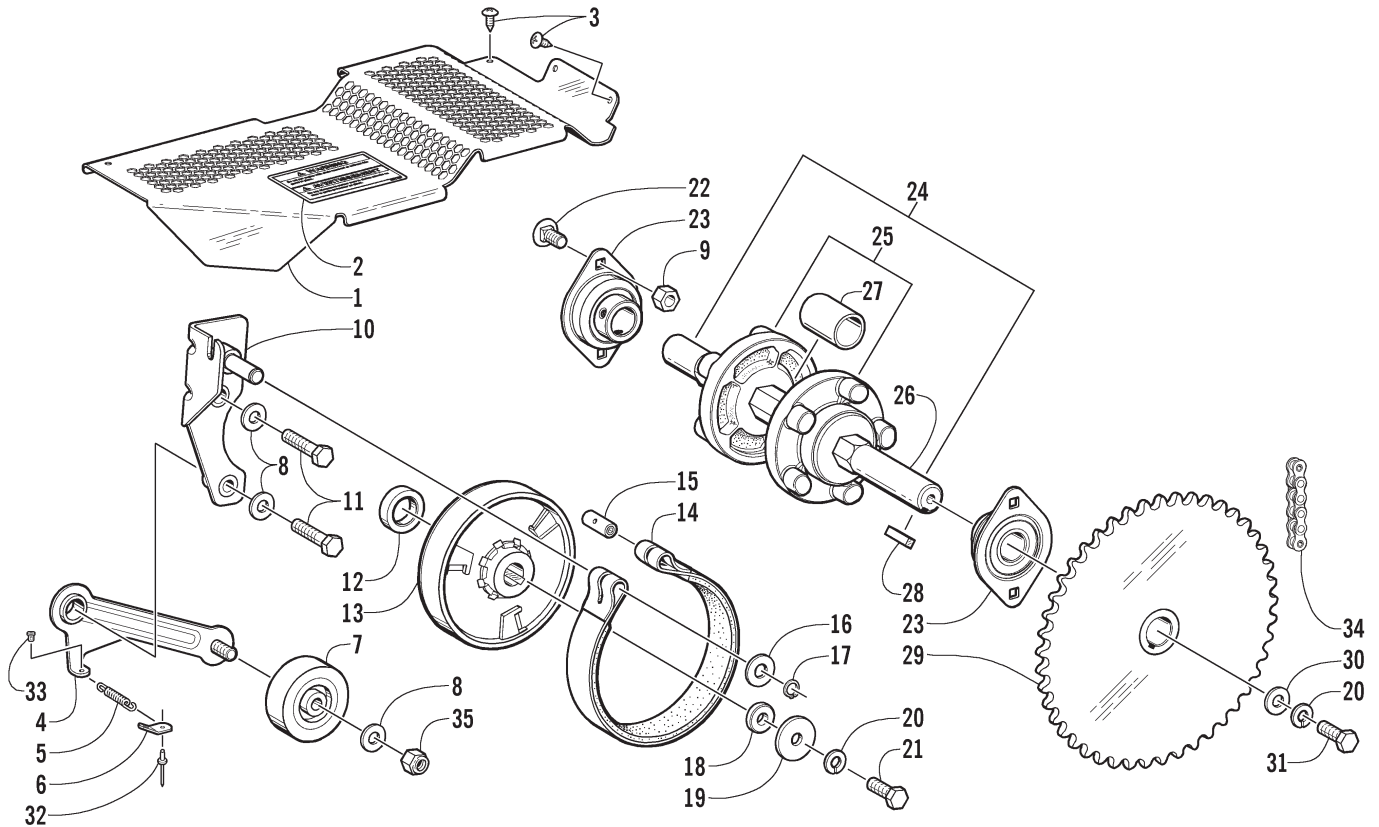

DRIVE TRAIN SHAFT AND BRAKE ASSEMBLIES

0736-148

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1612-180	1	Shield, Clutch/Brake/Muffler	19	0123-260	1	Washer
2	3611-754	1	Decal, Warning - Guard	20	8051-242	2	Washer, Lock
3	0623-797	3	Screw, Self-Tapping	21	8004-132	1	Screw, Cap
4	0702-376	1	Tensioner, Chain	22	8011-130	4	Bolt, Carriage
5	1602-066	1	Spring, Tensioner - Chain	23	1602-023	2	Bearing, Drive Sprocket
6	2606-021	1	Tab, Spring Retainer	24	<u>0728-061</u>	1	Track Drive Assembly (inc. 23 and 25-27)
7	1602-065	1	Roller, Chain Tensioner	25	<u>1602-117</u>	2	• Sprocket, Track Drive
8	8050-247	3	Washer	26	1602-017	1	• Shaft, Drive Sprocket
9	8040-426	4	Nut, Lock	27	<u>1602-148</u>	1	• Spacer
10	0702-360	1	Bracket, Brake	28	0623-823	1	Key
11	8004-135	2	Screw, Cap	29	1602-018	1	Sprocket, Chain - Track Drive
12	1602-026	1	Spacer, Clutch - Inner	30	0123-019	1	Washer
13	1602-020	1	Clutch, Centrifugal	31	8002-131	1	Screw, Cap
14	1602-021	1	Band, Brake	32	8060-484	1	Rivet
15	1602-049	1	Pin, Retainer - Brake Cable	33	0623-868	1	Bushing, Snap
16	8050-277	1	Washer	34	1602-019	1	Chain, 76P
17	0623-821	1	Ring, Snap	35	8041-426	1	Nut, Lock
18	1602-027	1	Spacer, Clutch - Outer				

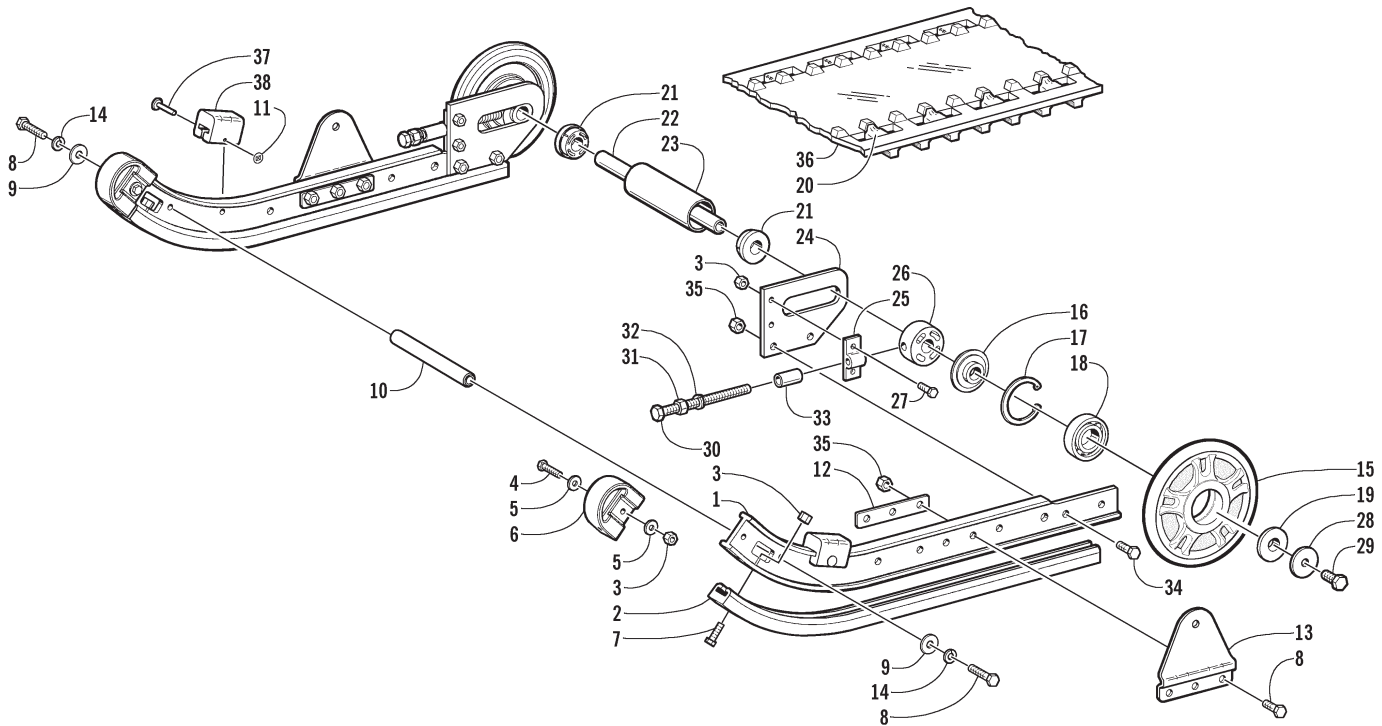


SLIDE RAIL, IDLER WHEELS, AND TRACK ASSEMBLY

(Complete Skid Frame Assembly p/n 7995-505)

0736-149


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1604-705	2	Rail, Formed	20	1602-079	32	Clip, Guide
2	1604-568	2	Wearstrip, Slide Rail - Black	21	0604-968	2	Bushing, Spacer - Rear Idler Wheel
3	8040-366	8	Nut, Lock	22	1604-562	1	Axle, Idler Wheel - Rear
4	8002-044	2	Screw, Cap	23	1604-563	1	Spacer, Idler Wheel - Rear
5	8050-217	4	Washer	24	1604-661	2	Housing, Rear Axle
6	0604-231	2	End Cap, Slide Rail	25	0604-206	2	Adjuster, Track
7	0123-869	2	Screw, Machine	26	0604-165	2	Bushing, Rear Idler Wheel - Adjustment
8	8002-131	8	Screw, Cap	27	8002-041	4	Screw, Cap
9	8050-247	2	Washer	28	0123-570	2	Washer
10	1604-566	1	Axle, Cross-Brace	29	8012-222	2	Screw, Cap
11	0423-090	2	Nut, Push	30	0124-310	2	Screw, Cap
12	1604-727	2	Plate, Backing	31	8042-486	2	Nut
13	1604-716	2	Bracket, Support - Arm	32	8051-277	2	Washer, Lock
14	8051-247	2	Washer, Lock	33	0604-298	2	Spacer, Track Adjuster
15	1604-691	2	Wheel, Idler - Rear (inc. 16-19)	34	8002-132	4	Screw, Cap
16	1604-772	2	• Insert, Idler Wheel - Inner	35	8040-426	10	Nut, Lock
17	0123-798	2	• Ring, Retaining	36	1602-015	1	Track Assembly (inc. 20)
18	0107-598	2	• Bearing	37	0123-767	2	Rivet, Solid
19	1604-773	2	• Insert, Idler Wheel - Outer	38	0104-631	2	Pad

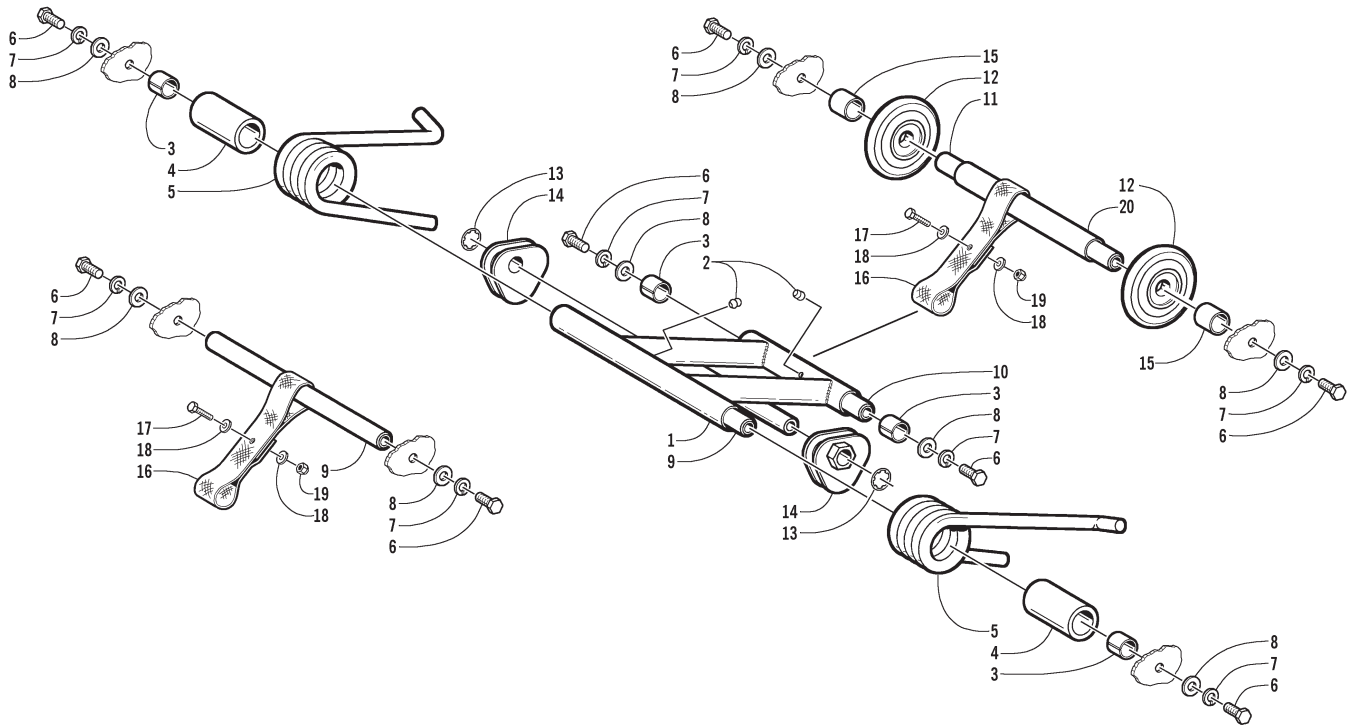

REAR SUSPENSION ARM ASSEMBLY

0736-150


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>0704-545</u>	1	Arm, Rear Suspension (inc. 2-3)	11	1604-673	1	Axle
2	9916-963	2	• Fitting, Grease	12	0300-180	2	Wheel, Idler
3	0603-083	4	• Bearing	13	0623-138	2	Ring, Retaining
4	<u>1604-715</u>	2	Sleeve, Spring	14	1604-204	1	Block, Spring Adjuster - Right
5	<u>1604-706</u>	1	Spring, Rear Suspension - Right		1604-205	1	Block, Spring Adjuster - Left
	<u>1604-707</u>	1	Spring, Rear Suspension - Left	15	1604-565	2	Spacer
6	8002-131	8	Screw, Cap	16	<u>1604-708</u>	2	Strap, Limiter
7	8051-247	8	Washer, Lock	17	8002-042	2	Screw, Cap
8	8050-247	8	Washer	18	8050-222	4	Washer
9	1604-555	2	Axle	19	8040-366	2	Nut, Lock
10	<u>1604-710</u>	1	Axle, Rear Suspension Arm - Lower	20	1604-564	1	Spacer

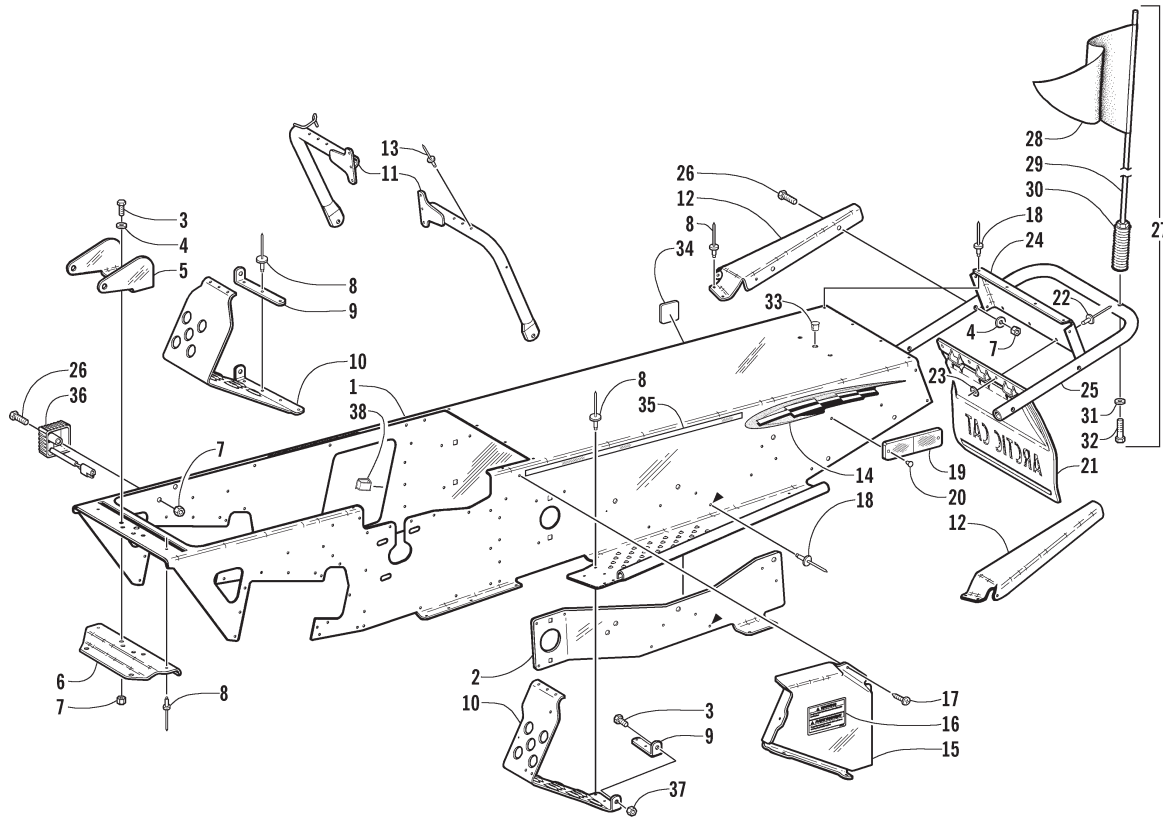

CHASSIS, FOOTREST, AND REAR BUMPER ASSEMBLY

0736-151


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>0718-996</u>	1	Tunnel Assembly (inc. 2)	17	0623-301	4	Screw, Self-Tapping
2	<u>2606-218</u>	1	• Plate, Reinforcement - Tunnel - Right	18	0123-418	30	Rivet
	<u>2606-219</u>	1	• Plate, Reinforcement - Tunnel - Left	19	0606-029	2	Reflector, Rear - Red
3	8002-040	6	Screw, Cap	20	0623-269	4	Clip, Retaining
4	8050-217	8	Washer	21	1606-750	1	Snowflap
5	2606-009	1	Bracket, Mounting - Hood - Lower	22	8060-628	4	Rivet
6	2606-019	1	Plate, Reinforcement	23	0123-802	4	Washer
7	8040-366	9	Nut, Lock	24	1606-740	1	Plate, Cover - Tunnel
8	8060-484	AR	Rivet	25	1706-018	1	Bumper, Rear
9	1606-826	1	Bracket, Support - Footrest - Right	26	8002-044	5	Screw, Cap
	1606-827	1	Bracket, Support - Footrest - Left	27	1706-105	1	Flag, Safety - Assembly (inc. 28-32)
10	1606-784	1	Footrest - Right	28	1706-104	1	• Flag, Safety
	1606-785	1	Footrest - Left	29	1606-954	1	• Pole, Safety Flag
11	<u>1706-283</u>	1	Support, Footrest - Right	30	2606-010	1	• Mounting, Safety Flag - Assembly
	1706-041	1	Support, Footrest - Left	31	8050-247	1	• Washer
12	1606-816	1	End Cap, Rear Bumper - Right	32	8002-134	1	• Screw, Cap
	1606-817	1	End Cap, Rear Bumper - Left	33	0623-562	1	Plug, Hole
13	8060-486	6	Rivet	34	0411-053	1	Decal, "CE"
14	<u>3611-880</u>	1	Decal, Tunnel - Right	35	<u>3611-923</u>	AR	Decal, Reflective - 20 ft
	<u>3611-881</u>	1	Decal, Tunnel - Left	36	0630-001	1	Regulator, Voltage
15	1606-786	1	Cover, Sprocket - Driven	37	8041-366	2	Nut, Lock
16	3611-754	1	Decal, Warning - Cover	38	0123-394	1	Clamp

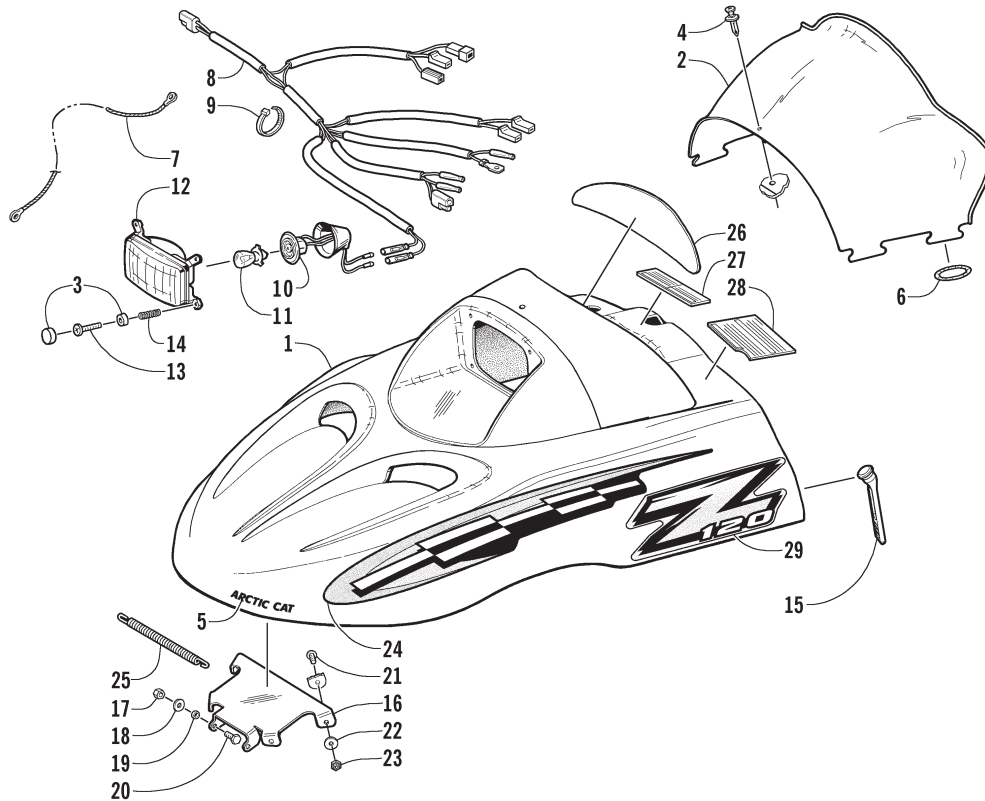

HOOD, HEADLIGHT, AND WINDSHIELD ASSEMBLY

0736-152


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>0718-008</u>	1	Hood w/o Decals	16	2606-008	1	Bracket, Mounting - Hood - Upper
	<u>0718-007</u>	1	Hood w/Decals	17	8040-366	2	Nut, Lock
2	1606-747	1	Windshield	18	8050-217	2	Washer
3	0124-054	4	Snap Cap w/Washer	19	0107-234	2	Spacer
4	0623-243	1	Clip, Retaining	20	8002-040	2	Screw, Cap
5	<u>3611-883</u>	1	Decal, "Arctic Cat" - Hood	21	0623-420	4	Screw, Hex Washer Head
6	0616-032	4	O-Ring, Windshield	22	0623-594	4	Washer
7	0606-121	1	Cable, Hood	23	0623-392	4	Nut, Lock
8	<u>0686-684</u>	1	Harness, Wiring - Main	24	<u>3611-878</u>	1	Decal, Hood - Right Front
9	0123-788	AR	Cable Tie - 7 in.		<u>3611-879</u>	1	Decal, Hood - Left Front
10	0609-006	1	Socket w/Rubber Cap	25	0123-510	1	Spring, Extension
11	0609-004	1	Bulb, Headlight	26	3611-675	1	Decal, Instrument Panel
12	0609-005	1	Lens/Reflector, Headlight	27	3611-755	1	Decal, Caution - Throttle
13	0123-616	4	Screw, Adjustment	28	3611-678	1	Decal, Caution - Hood
14	0123-614	4	Spring, Adjustment Screw	29	<u>3611-877</u>	2	Decal, "Z 120" - Hood
15	1606-930	2	Strap, Hold-Down				

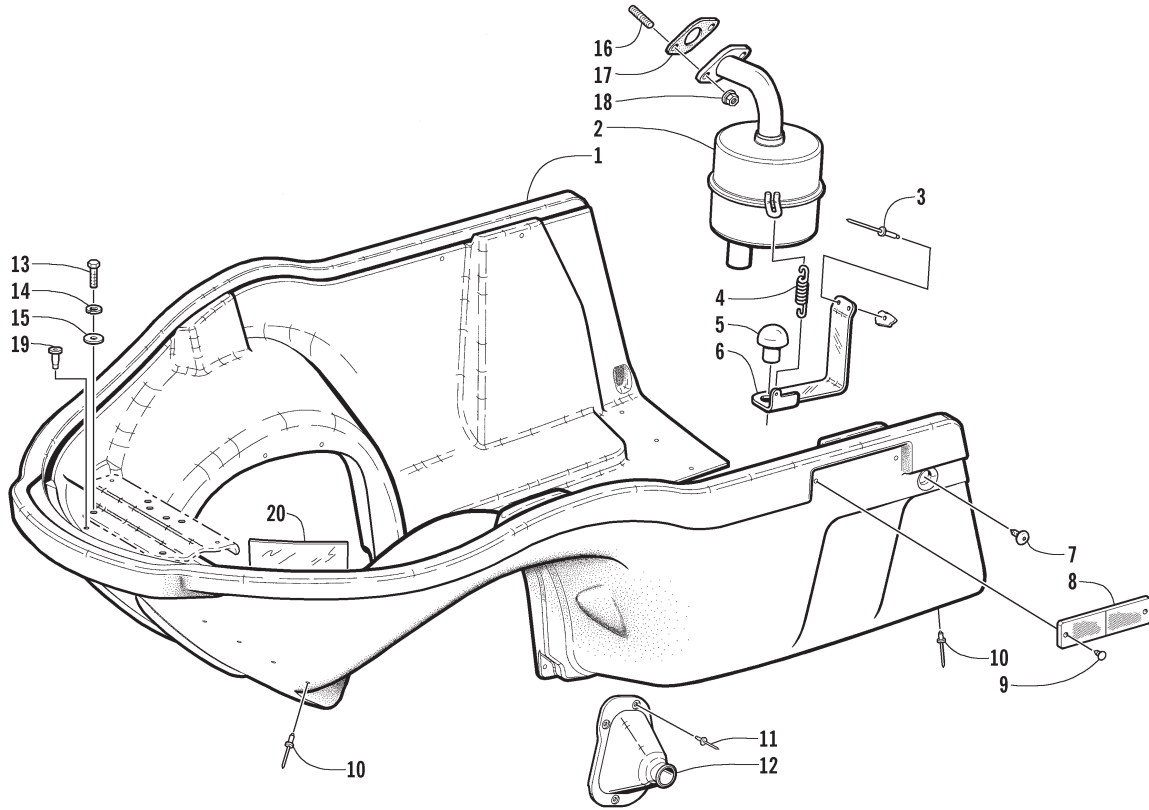

BELLY PAN AND EXHAUST ASSEMBLIES

0736-153

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1606-748	1	Belly Pan	12	0605-464	1	Boot, Tie Rod - Right
2	1612-155	1	Muffler		0605-465	1	Boot, Tie Rod - Left
3	8060-484	2	Rivet	13	8002-041	2	Screw, Cap
4	0123-321	1	Spring, Extension	14	8051-217	2	Washer, Lock
5	0612-111	1	Bumper, Molded - Rubber	15	8050-222	2	Washer
6	1612-146	1	Bracket, Muffler Support	16	0693-317	2	Bolt, Stud
7	0623-309	2	Screw, Self-Tapping	17	0691-852	1	Gasket, Exhaust
8	0606-526	2	Reflector, Front - Yellow	18	3004-326	2	Nut
9	0623-269	4	Clip, Retaining	19	0623-857	2	Plug
10	8061-508	22	Rivet	20	0619-206	AR	Tape, Foil
11	8060-508	8	Rivet				

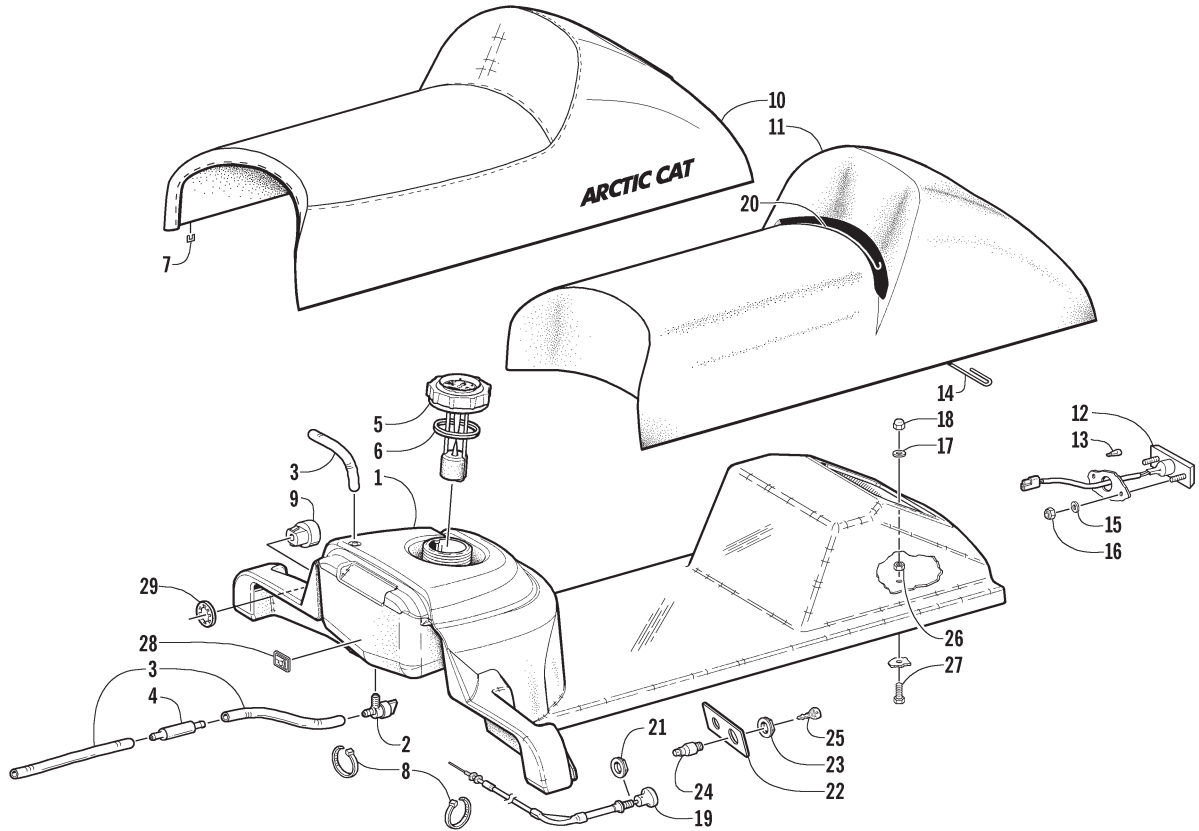


GAS TANK, SEAT, AND TAILLIGHT ASSEMBLY

(Complete Seat Assembly p/n 0718-997)

0736-154 * Not a Service Part


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	2606-125	1	Tank, Gas/Seat-Base (inc. 2-5)	15	8050-157	2	Washer
2	0676-017	1	• Valve, Shut-Off	16	0123-709	2	Nut w/Lock Washer
3	0610-017	AR	• Hose, Gasline/Vent - 100 ft	17	0623-184	2	Washer
	0610-008	AR	• Hose, Gasline/Vent - 25 ft	18	0123-108	2	Nut, Nylon Cap
4	0510-335	1	• Filter, Fuel	19	0687-124	1	Cable, Choke
5	1670-084	1	Cap, Gas Tank (inc. 6)	20	2606-031	1	Wire, Seat
6	0109-733	1	• Seal, Gas Cap	21	0623-054	1	Nut, Choke Cable
7	*	AR	Staple, Seat Cover (1/4 in. Stainless Steel)	22	3611-676	1	Decal, Switch/Choke
8	0123-788	3	Cable Tie - 7 in.	23	0609-111	1	Nut, Retaining
9	0116-469	1	Bushing, Recoil	24	0109-822	1	Switch, Ignition (inc. 25)
10	1706-143	1	Cover, Seat	25	0116-065	2	• Key, Ignition
11	1706-017	1	Foam, Seat	26	8041-366	2	Nut, Lock
12	0609-070	1	Taillight Assembly (inc. 13)	27	8002-040	2	Screw, Cap
13	0230-020	1	• Bulb, Taillight	28	3611-856	1	Decal, Fuel Shut-Off
14	0606-057	1	Wire, Seat	29	0123-579	1	Nut, Push

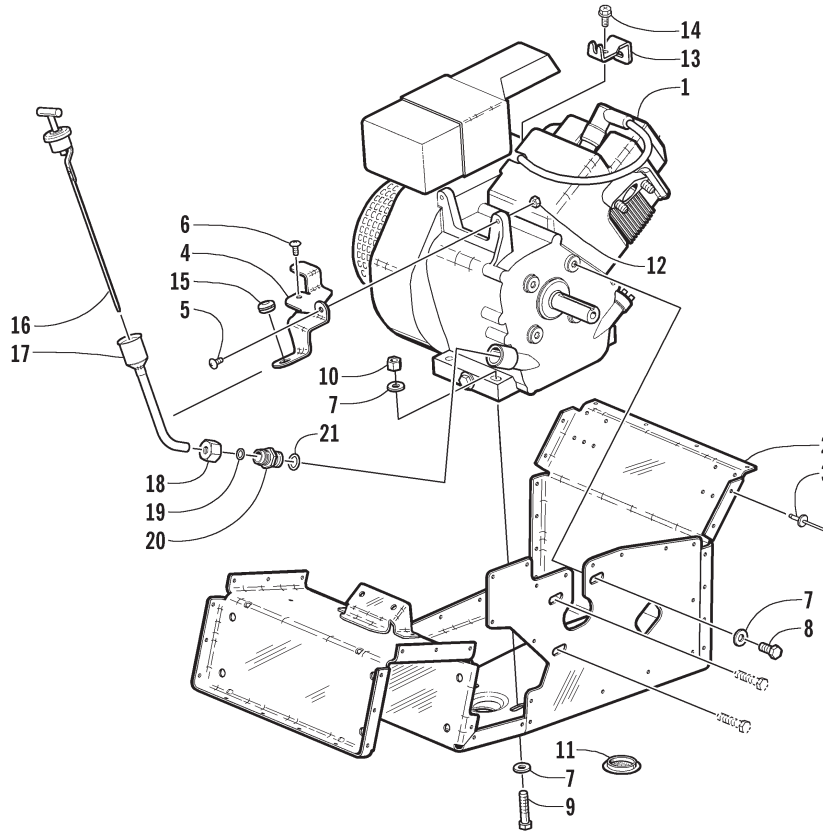

ENGINE AND RELATED PARTS

0736-155


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0662-288	1	Engine, AA12A1	12	8041-246	1	Nut, Lock
2	1706-235	1	Front End	13	1670-074	1	Bracket, Throttle Cable
3	8060-484	AR	Rivet	14	3004-987	1	Screw, Cap
4	2606-223	1	Cover, Governor	15	1670-235	1	Grommet
5	8007-400	1	Screw, Machine	16	1670-191	1	Stick, Oil Level
6	0623-914	1	Screw, Self-Tapping	17	1670-190	1	Tube, Oil Level Stick
7	8050-247	9	Washer	18	0623-896	1	Nut, Shoulder
8	8004-130	1	Screw, Cap	19	0623-884	1	O-Ring, Oil Level Adapter
9	8002-135	4	Screw, Cap	20	0623-883	1	Adapter, Oil Level
10	8040-426	4	Nut, Lock	21	0623-903	1	O-Ring
11	0623-822	5	Plug				

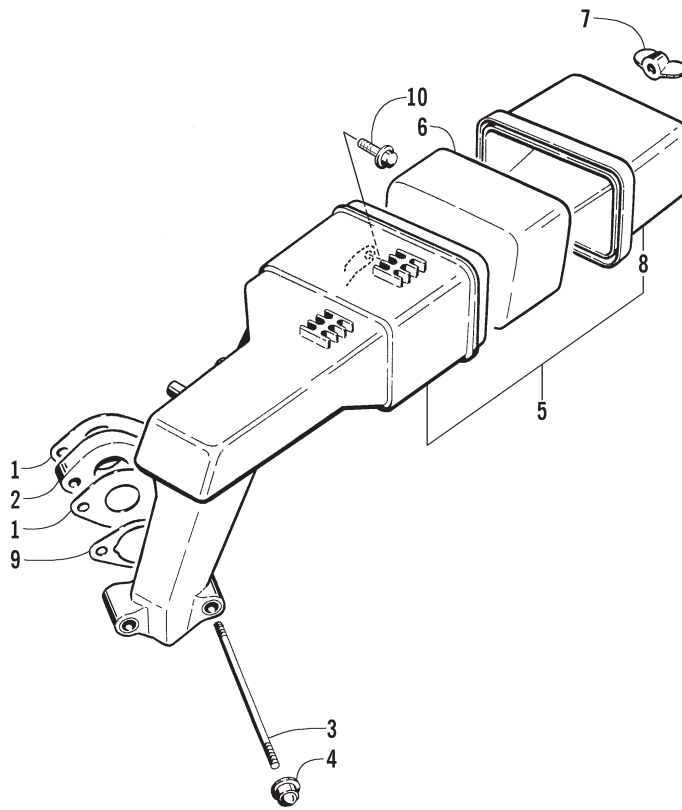

AIR CLEANER ASSEMBLY

0732-147


Ref. Part No.	Qty.	Description	Ref. Part No.	Qty.	Description		
1	0693-282	2	Gasket, Carburetor	6	0691-736	1	● Filter, Air Cleaner
2	0691-850	1	Insulator, Carburetor	7	0693-542	1	● Nut, Wing
3	0693-364	2	Bolt, Stud	8	0691-851	1	● Cover, Air Cleaner
4	3004-488	2	Nut	9	0693-287	1	Gasket, Air Cleaner
5	0693-543	1	Cleaner, Air - Assembly (inc. 6-8)	10	0693-307	1	Bolt

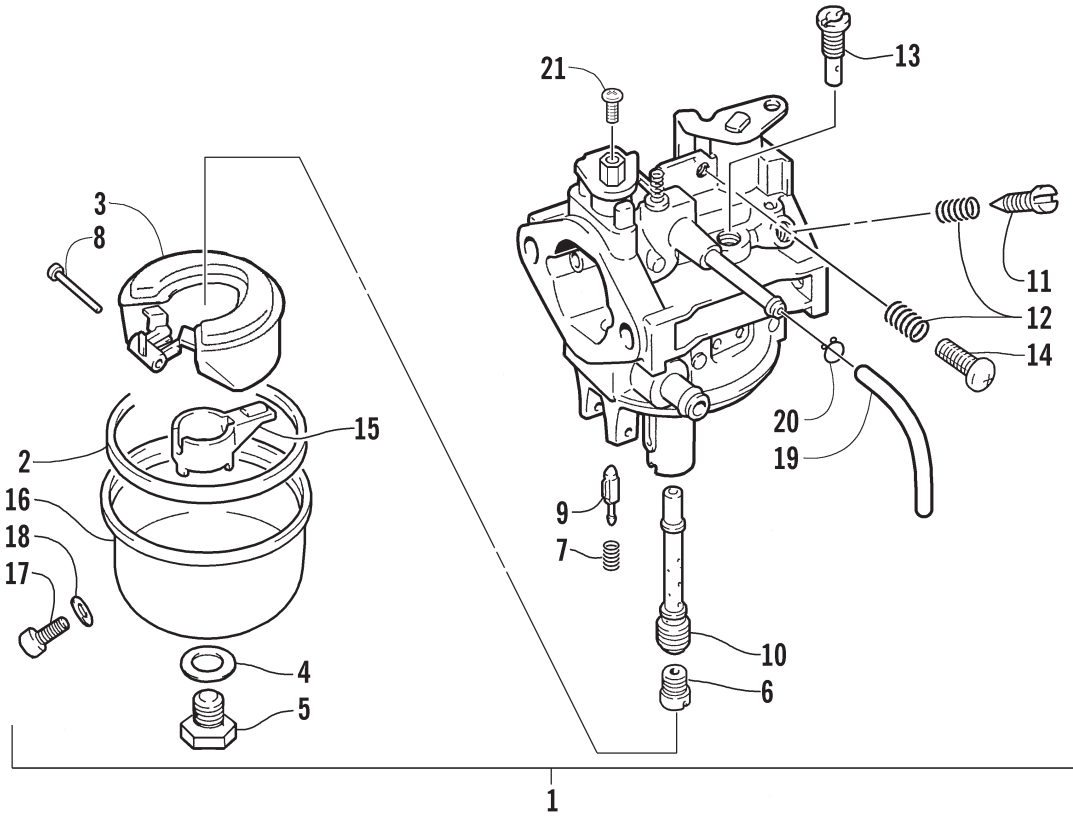

CARBURETOR

0735-414 *Optional


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0694-028	1	Carburetor Assembly (inc. 2-21)	13	0694-033	1	• Pilot Jet (42.5)
2	0691-423	1	• Gasket, Float Chamber		0693-538	1	• Pilot Jet (37.5)*
3	0691-424	1	• Float		6506-261	1	• Pilot Jet (45)*
4	0691-422	1	• Gasket, Drain Plug		6506-262	1	• Pilot Jet (47.5)*
5	0691-421	1	• Plug, Drain		6506-263	1	• Pilot Jet (50)*
6	0694-032	1	• Main Jet (77.5)	14	0693-315	1	• Screw
7	0691-428	1	• Spring, Needle Jet	15	0691-426	1	• Ring
8	0693-536	1	• Pin, Float	16	0693-283	1	• Chamber, Float
9	0693-055	1	• Needle Jet	17	0693-284	1	• Screw, Drain
10	0693-056	1	• Nozzle	18	0693-285	1	• Gasket, Drain Screw
11	0691-102	1	• Adjuster	19	0694-012	1	• Hose, Gasline
12	0691-272	2	• Spring	20	0694-011	1	• Clamp, Hose
				21	0694-025	1	• Screw

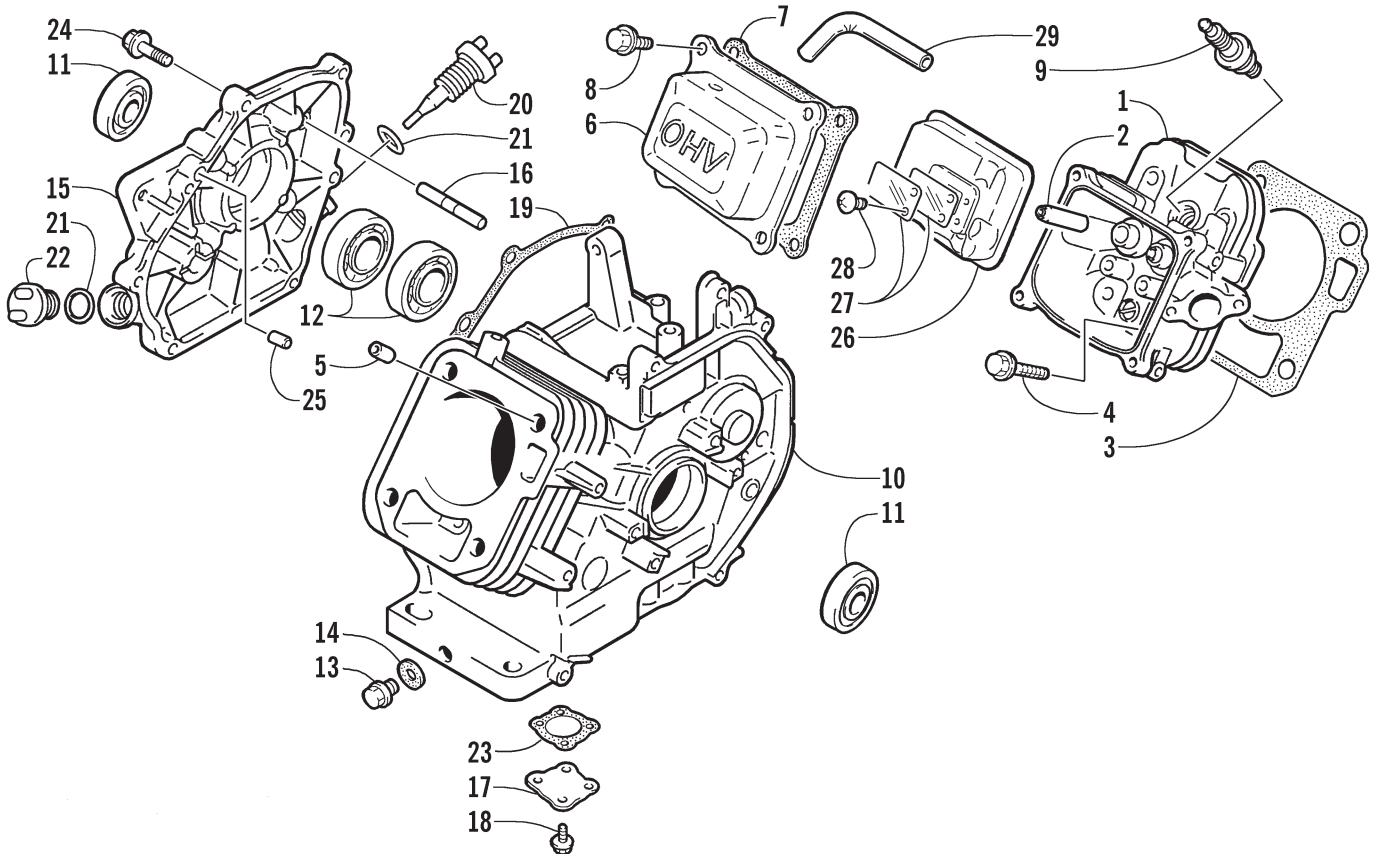

CYLINDER AND CRANKCASE

0735-417


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0691-384	1	Head, Cylinder (inc. 2)	17	0694-022	1	Cover, Oil Level Sensor
2	0691-545	2	• Guide, Valve	18	0693-307	4	Bolt
3	0691-386	1	Gasket, Cylinder Head	19	0691-834	1	Gasket, Crankcase
4	0693-303	4	Bolt	20	0694-003	1	Gauge, Engine Oil Level - Assembly (inc. 21)
5	3008-199	2	Pin, Dowel	21	0693-298	2	• O-Ring
6	0691-830	1	Cover, Cylinder Head	22	0694-004	1	Plug, Engine Oil Drain - Assembly (inc. 21)
7	0691-387	1	Gasket, Cylinder Head Cover	23	0691-837	1	Gasket, Engine Oil Level Sensor
8	0693-241	4	Bolt	24	0693-243	7	Bolt
9	0217-703	1	Plug, Spark (BPR6ES)	25	3005-206	2	Pin, Dowel
10	0694-001	1	Cylinder Assembly (inc. 11-14)	26	0691-393	1	Body, Air Breather - Assembly (inc. 27-28)
11	0691-376	2	• Seal, Oil	27	0693-226	1	• Valve, Reed - Set
12	0691-374	2	• Bearing	28	0693-305	2	• Screw
13	0693-253	2	• Plug	29	0693-362	1	Hose, Air Breather
14	3002-276	2	• Gasket				
15	0694-002	1	Cover, Crankcase - Assembly - Side (inc. 12,13, and 16)				
16	0691-844	1	• Shaft, Governor Gear				

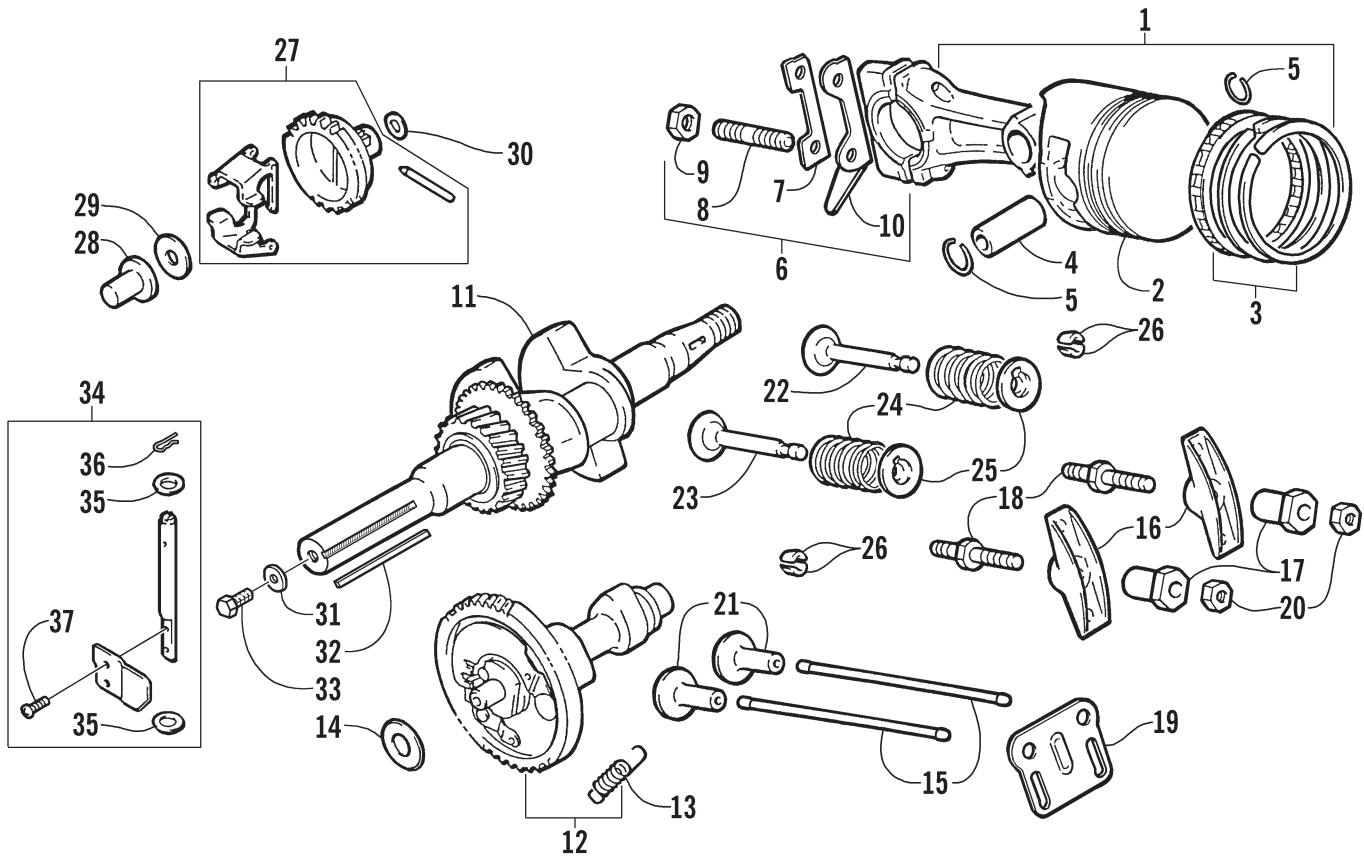

PISTON AND CRANKSHAFT

0735-429


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0694-026	1	Piston Assembly (inc. 2, 3, and 5)	17	0691-413	2	Pivot
2	0691-398	1	• Piston	18	0691-414	2	Bolt, Stud - Pivot
	0691-569	1	• Piston, Oversized (0.25 mm)	19	0691-415	1	Guide, Push Rod
	0691-570	1	• Piston, Oversized (0.50 mm)	20	0691-016	2	Nut
3	0691-399	1	• Ring, Piston - Set	21	0691-406	2	Tappet
	0691-571	1	• Ring, Piston - Set - Oversized (0.25 mm)	22	0694-008	1	Valve, Intake
	0691-572	1	• Ring, Piston - Set - Oversized (0.50 mm)	23	0694-009	1	Valve, Exhaust
4	0691-400	1	Pin, Piston	24	0691-410	2	Spring, Valve
5	0691-378	2	Circlip	25	0693-313	2	Retainer, Valve Spring
6	0691-936	1	Rod, Connecting - Assembly (inc. 7-10)	26	0693-281	4	Cotter, Valve
7	0691-403	1	• Plate, Lock	27	0693-698	1	Gear, Governor - Set
8	0691-366	2	• Bolt, Stud	28	0691-842	1	Slider, Governor
9	3004-851	2	• Nut	29	0691-843	1	Washer
10	0691-402	1	• Plate, Splash	30	3004-652	1	Washer
11	<u>0694-027</u>	1	Crankshaft Assembly	31	0694-024	1	Washer
12	0691-922	1	Camshaft (inc. 13)	32	0694-006	1	Key, Crankshaft
13	0691-380	1	• Spring	33	0694-007	1	Bolt, Crankshaft
14	0691-840	1	Washer	34	0693-258	1	Shaft, Throttle Control - Set (inc. 35-37)
15	0691-407	2	Rod, Push	35	0693-252	2	• Washer
16	0691-412	2	Arm, Rocker	36	0691-848	1	• Pin, Snap
				37	3004-563	2	• Screw

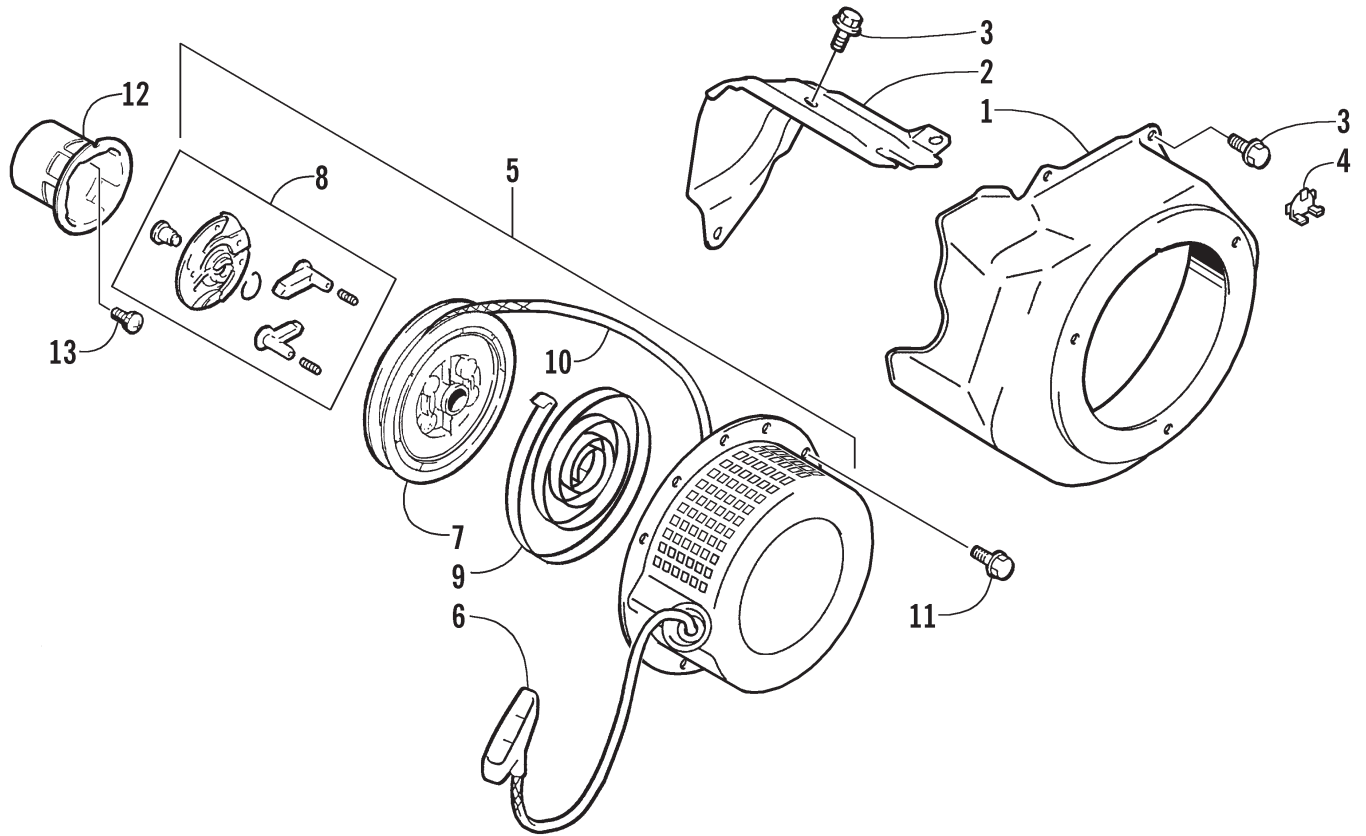

RECOIL STARTER

0735-430


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0694-013	1	Cover, Ventilation Cowling	8	0693-256	1	• Ratchet Set
2	0691-853	1	Cowling, Ventilation	9	0691-298	1	• Spring, Spiral
3	0693-241	7	Bolt	10	3003-327	1	Rope
4	0691-122	1	Protector, Lead Wire	11	0693-246	3	Bolt
5	0694-014	1	Starter, Recoil - Assembly (inc. 6-9)	12	0691-863	1	Pulley, Starter
6	0693-257	1	• Grip Assembly	13	3004-423	3	Screw
7	0691-856	1	• Reel				

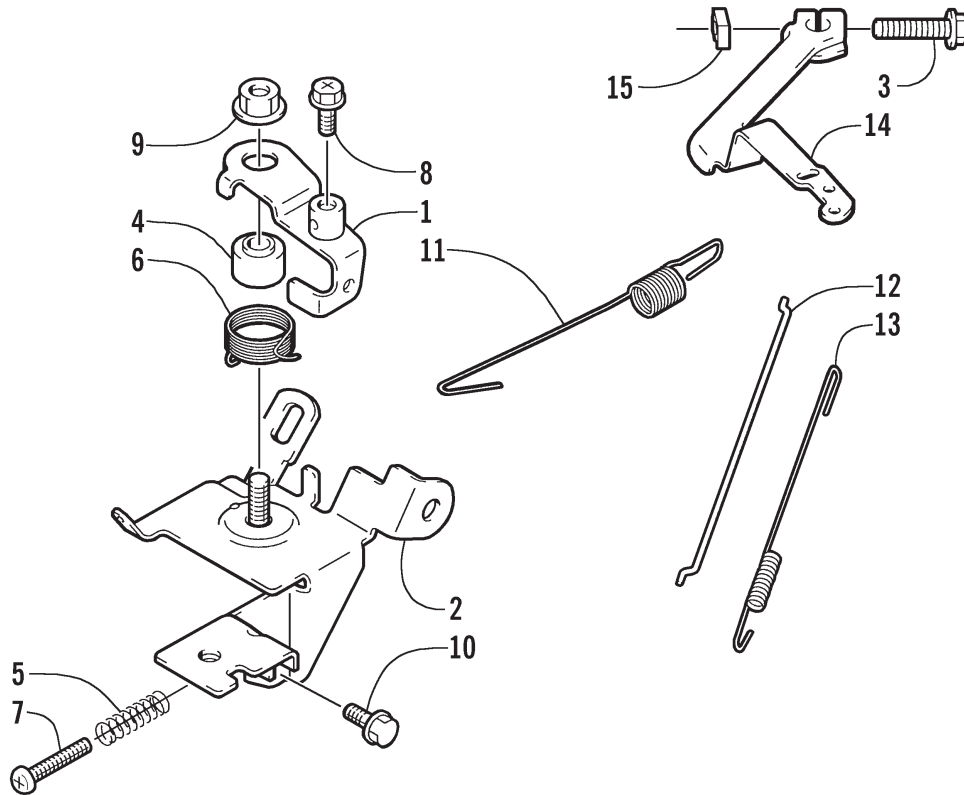

THROTTLE CONTROL ASSEMBLY

0735-433

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0694-016	1	Lever, Throttle Cable	8	3004-987	1	Bolt
2	0694-017	1	Bracket, Throttle Control	9	3004-351	1	Nut
3	0693-416	1	Bolt	10	0693-241	1	Bolt
4	3002-459	1	Spacer	11	0694-015	1	Spring, Throttle Control
5	0691-901	1	Spring	12	0694-019	1	Rod, Carburetor
6	3003-922	1	Spring	13	0691-455	1	Spring, Carburetor Rod
7	3004-611	1	Screw	14	0693-259	1	Lever, Throttle Control (inc. 3 and 15)
				15	0691-017	1	• Nut

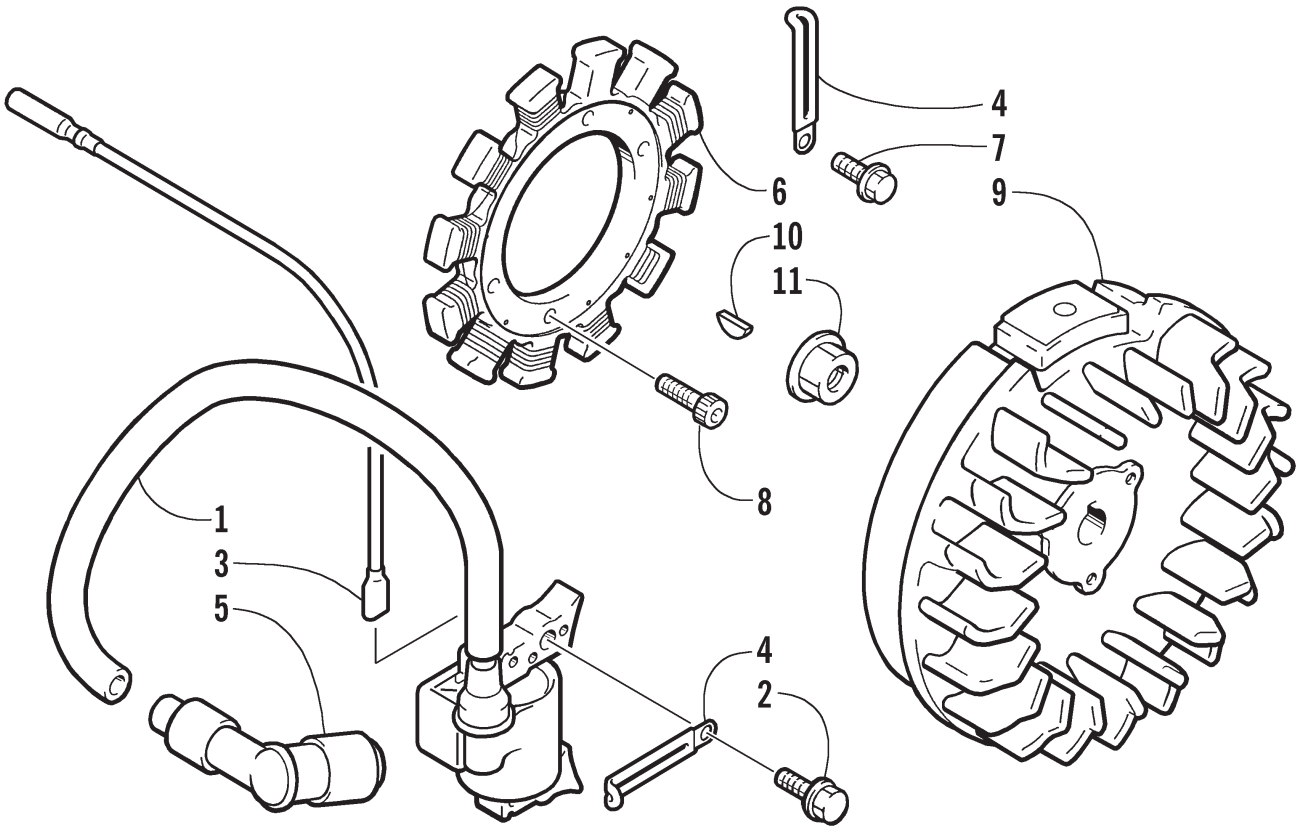

MAGNETO

0735-431

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0693-326	1	Coil, Ignition - Assembly	7	0693-241	1	Bolt
2	0693-242	2	Bolt	8	0694-023	4	Bolt
3	0693-263	1	Wire, Magneto Lead	9	0694-030	1	Rotor/Flywheel
4	3002-964	2	Clamp, Wire	10	3004-540	1	Key
5	0691-322	1	Cap, Spark Plug	11	0691-370	1	Nut
6	0694-029	1	Stator				

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description

Related Items

2001 Z 120

(Model No. S2001ZAAAAUSG)

1639-851	Cover, Machine (Deluxe Coverall)	1639-754	Snowflap, Custom
1639-830	Wearbars, 4 in. Carbide (Pair)	2639-013	Wheel Kit - Rear Suspension
1639-831	Studs, Carbide Push-Through (24/pk)	1639-795	Wheel Kit - Ski
1639-762	Handlebar Grips - Green	1604-611	Wearstrips - Green
2639-018	Handwarmers	1639-526	Windscreen - Black
1639-763	Headlight Cover - Green	1639-797	Windshield - Race
1639-764	Headlight Cover - Smoke	1639-768	Windshield - Tall
1639-761	Running Board Grip Plates - Green	2256-351	Manual, Operator's
1639-766	Skid Plate - Green	2256-406	Manual, Illustrated Parts

■ **NOTE:** For a complete list of related items, refer to the current accessory catalog.

